



ATD-30300 & ATD-31200 OWNERS MANUAL



For Your Safety Read and Save These Instructions:

Please read these important safety instructions and warnings before operating your ATD Blower. Use the ATD Blower in accordance with the safety instructions and warnings described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injuries to persons. Do not throw these instructions away-keep them for further reference.

Read these important safety instructions:

- **CONSIDER YOUR WORK AREA ENVIRONMENT.** Don't use The ATD Blower in damp or wet locations. Don't operate The ATD Blower in presence of flammable liquids, gases like gasoline or other fuels, lighter fluid, cleaners, oil-based paints, natural gas, hydrogen, coal dust, magnesium dust, grain dust, or explosive dust like gun powder. Do not use or store near hazardous or toxic materials.
- **USE SAFETY GLASSES.** Also use face or dust mask if work area is dusty. The operation of any utility blower can result in foreign objects being blown into the eyes, which can result in severe eye damage. Always wear safety goggles complying with ANSI Z87.1.
- **DON'T ABUSE CORD.** Never pull the ATD Blower cord or yank it to disconnect from receptacle. To unplug, grasp the plug, not the cord. Keep cord away from heat, oil, and sharp edges. Do not pull or carry by cord, use cord as handle, close a door on cord, or pull cord around sharp edges or corners.
- **SECURE THE ATD BLOWER** if used in an unstable area such as on a moving RV, etc.
- **MAINTAIN THE ATD BLOWER.** Keep Blower, motor and blower wheel clean. For safer operation, follow instructions for attaching accessories. Keep handle dry, clean and free from oil, grease and water.
- **DISCONNECT THE ATD BLOWER** when not in use, before servicing, and when attaching accessories. Turn off air mover before unplugging. Don't operate unit unattended.
- **NEVER** stick a screwdriver or any other object into the ventilation openings or air intake areas. Do not operate with any ventilation openings blocked; keep free of dust, lint, hair or anything that may reduce airflow. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts. DO NOT restrict air intake.
- **INSPECT FOR DAMAGE** before using The ATD Blower. Determine before use if it will operate properly. Check for alignment and/or binding of the motor and blower wheel. Inspect cord periodically for damage. Check the switch by turning the ATD Blower on and off while unit is plugged in.
- **RETURN THE ATD BLOWER** for repair or to replace damaged parts if any of them are found to be broken or if your ATD Blower is inoperative. The ATD Blower products may only be serviced and repaired by the official The ATD Blower Repair Center.

Warning: When using electric products, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury. Follow these important safety guidelines:

- Do not use this fan with any solid-state speed control device.
 - Do not use an extension cord with this air mover.
 - Do not expose to rain. Store indoors.
 - Do not use with damaged cord, plug or other parts.
 - Keep cord away from heated surfaces.
 - Do not handle plug or the air mover with wet hands.
 - Do not permit fingers to touch the terminals of plug when installing or removing the plug from the outlet.
- * After servicing, any safety device (includes grilles, impeller, etc.) shall be reinstalled or remounted as previously installed.

Troubleshooting

Problem	Solution
The ATD Blower unit won't run.	<ol style="list-style-type: none">1. Ensure that The ATD Blower unit is securely plugged into outlet or power source.2. Check that outlet or power source is receiving power.3. Check that The ATD Blower unit is turned on.
The ATD Blower power receptacle not working.	<ol style="list-style-type: none">1. Ensure that The ATD Blower unit is securely plugged into outlet or power source.2. Check that outlet or power source is receiving power.3. Press the reset button above the power receptacle.

Parts Listing

ATD-30300

ORDERING PART#	PART DESCRIPTION
PRT30300-01	MOTOR
PRT30300-02	CAPACITOR
PRT30300-04	FAN WHEEL
PRT30300-11	SPEED CONTROL KNOB
PRT30300-12	POWER SWITCH
PRT30300-15	CIRCUIT BREAKER

ATD-31200

ORDERING PART#	PART DESCRIPTION
PRT31200-01	MOTOR
PRT31200-02	CAPACITOR
PRT31200-04	FAN WHEEL
PRT31200-11	SPEED CONTROL KNOB
PRT31200-12	POWER SWITCH
PRT31200-15	CIRCUIT BREAKER

CFM Products, LLC**ATD Tools, Inc. LIMITED ONE-YEAR WARRANTY**

Every ATD Blower is thoroughly inspected and tested before leaving the factory. It is warranted to be free of defects in workmanship and materials for the period of ONE YEAR for the date of purchase.

THIS WARRANTY IS VOID IF:

1. Alterations have been made to the product.
2. Repairs are required because of normal wear and tear.
3. Repairs have been made or attempted by anyone other than CFM Products, LLC.
4. The product has been mistreated, misused or improperly maintained and operated.
5. Use of product not Mfg. by CFM Products, LLC with the ATD Blower voids this warranty.

In no event shall CFM Products, LLC be liable for any damage beyond the repair or replacement as described above, including without limitation, indirect, incidental, or consequential damages.

This warranty is the only warranty made and is in lieu of all other warranties, expressed or implied including without limitation, warranties of merchantability and fitness for a specific purpose.

This warranty gives you specific legal rights and you may also have other rights, which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitations or exclusions may not apply to you. Some states do not allow limitation on how long an implied warranty lasts, so the above limitations may not apply to you.

Questions or Comments?

Call us at 1-800-992-9509 or visit our website at www.cfm-products.com.

© 2006 CFM Products, Chicago, IL BB#1010 Printed in China