

1. SAFETY INSTRUCTIONS

- Ensure the dispenser is on a reasonably flat, level floor or securely wall mounted before loading.
- Be aware that the paper cutting blade is sharp handle with care.
- DO NOT sit or stand on the dispenser.
- DO NOT use the dispenser for any purpose other than that for which it was designed.

2. CONTENTS & ASSEMBLY

- 2.1. Contents
- 2.1.1. Check the contents against the list below and if any items are missing or damaged contact your supplier immediately.

 Cross Tube
 Paper Bar
 Tape Reel x 2
 Knob
 - Paper Cutter
- Paper Spring
- Base x 2
- Hub x 2

• Screw, 3/16 x 1/2" x 4 • Screw, 1/4 x 1-1/2" x 8 • Bolt, 1/4 X 3-1/2" X 2

• Frame Side x 2

- Step
- · Bag of fittings
- Fittings: • Foot x 4
- Spring x 2
- Slide Ring x 2

• Hub x 2

- Paper Washer, x 2
 - Washer, 1/4" x 20

fig. 1

- Wing Nut, 1/4" x 4 • Nut. 1/4" x 4 • Screw, 5/16 x 1-1/2" x 2 • Washer, 5/16" x 2
- 2.2. Assembly

Note: Numbers in brackets refer to item numbers in the Parts List.

- 2.2.1. If dispenser is to be free standing fit the four feet (16) to the side frames (1).
- If the dispenser is to be bench or wall mounted fit the two bases (9) to the rear legs of the side frames (1), using 5/16" x 1-1/2" screws (15), 1/4" washers (14) and 1/4" nuts (13). Fit two of the feet (16) to the front legs of the side frames (1).
- 2.2.3. Attach the step (2) to the top of the side frames (1) using 1/4 x 1-1/2" screws (15) and 1/4" washers (14).
- 2.2.4. Attach the two side frames (1) to the cross tube (4) using 5/16 x 1-1/2" screws (12) and 5/16" washers (11). Do not fully tighten screws at this stage.
- Attach paper spring (17) loops to either end of the paper cutter (3), as shown in fig.1.
- Fit paper cutter (3) to upper holes in front legs of side frames (1) using 1/4 a 1-1/2" screws (15), 1/4" washers (14) and 1/4" nuts (13). 2.2.6.
- 2.2.7. Tighten all screws/nuts.
- 2.2.8. Insert 1/4 x 3-1/2" bolts (22) through front legs of side frames (1) and tighten in place using 1/4" washers (14) and 1/4" nuts (13).
- Thread a wing nut (18) onto each of bolts (22) with the wings towards the frame leg. 2.2.9.
- 2.2.10. Slide washer (14) and hub (21) onto each bolt (22) and then fit tape reels (20) onto hubs (21) with open sides towards side frame (1) legs.
- 2.2.11. Retain tape reels with washer (14) and wing nut (18).
- 2.2.12. Fit paper washers (6), paper bar spring (23) and paper retainers (5) to paper bar (8) as shown in fig 2. Insert 3/16 x 1/2" screws (7) into paper retainers (5).
- 2.2.13. Locate paper bar (8) between bars of side frames (1) and retain with knob (24)

Paper Roll fig. 2

3. USE


- 3.1. Remove paper bar (8) from frame and remove washers (6), springs (23) and retainers (5).
- Slide paper bar (8) through centre of masking paper roll so that, when reinstalled in frame,
- paper will come from top of roll towards front of dispenser. 3.3. Replace washers (6), springs (23) and retainers (5), as shown in fig.2, at each end of roll. If two narrow rolls are used fit one spring and paper washer per roll and use the two extra paper retainers.
- 3.4. Refit paper bar, complete with paper roll, to frame assembly. Position roll in centre of bar and fix in place by tightening screws (7) in
- 3.5. Thread leading edge of paper between paper spring (17) and guide edge of paper cutter (3), see fig.1.
- 3.6. Press masking tape rolls onto tape reels (20) so that tape leaves bottom of rolls towards the rear of the dispenser. Rolls may be positioned relative to the masking paper edges by adjusting wing nuts (18).

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY, NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY, PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.



WARNING: This product contains chemicals, including lead, known to the State of California to cause cancer, birth defects or other reproductive harm. Wash hands after handling.



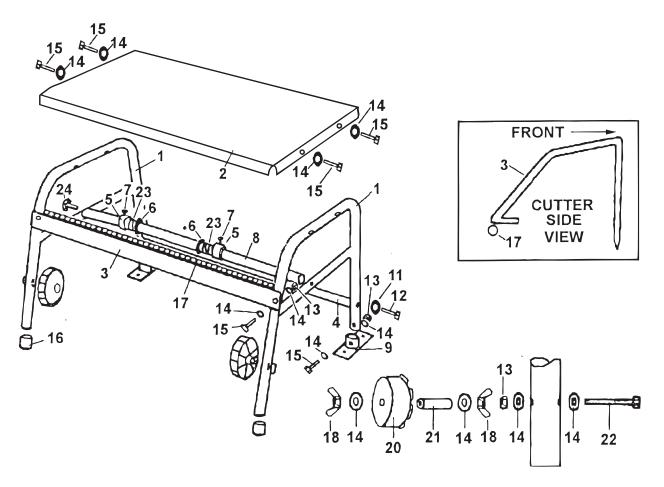

ITEM#	ORDERING PART#	PART DESCRIPTION
01	PRT6566-01	SIDE FRAME
02	PRT6566-02	STEP
03	PRT6566-03	PAPER CUTTER
04	PRT6566-04	CROSS TUBE
05	PRT6566-HK*	PAPER RETAINER
06	PRT6566-HK*	PAPER WASHER
07	PRT6566-HK*	SCREW, 3/16" x 1/2"
80	PRT6566-08	PAPER BAR
09	PRT6566-09	MOUNTING BRACKET
11	PRT6566-HK*	WASHER, 5/16"
12	PRT6566-HK*	SCREW, 5/16" x 1-1/2"
13	PRT6566-HK*	NUT, 1/4"

ITEM#	ORDERING PART#	PART DESCRIPTION
14	PRT6566-HK*	WASHER, 1/4"
15	PRT6566-HK*	SCREW, 1/4" x 1-1/2"
16	PRT6566-HK*	FOOT
17	PRT6566-17	PAPER SPRING
18	PRT6566-HK*	WING NUT
20	PRT6561-10	TAPE REEL
21	PRT6566-HK*	HUB
22	PRT6566-HK*	BOLT, 1/4" x 3-1/2"
23	PRT6566-HK*	PAPER SPRING BAR
24	PRT6566-24	KNOB
N/S	PRT6566-HK*	HARDWARE KIT
	•	· · ·

^{* -} PRT6566-HK (Hardware Kit) including PRT6566-05, 06, 07, 11, 12, 13, 14, 15, 16, 18, 21, 22 and 23