



ATD-3663

R1234yf Self-Sealing Design Can Tap Valve

Owner's Manual



FEATURES

- 1/2" ACME-LH thread for use with R1234yf self-sealing/reusable designed cans
- Exclusive "full grip" valve knob
- All metal construction provides durability
- Gasket assures leak proof operation
- Built-in safety check
- Meets SAE J2844

SAFETY WARNING AND PRECAUTIONS



WARNING: Wear safety glasses

The 1990 amendments to the United States Clean Air Act mandate that all personnel who service refrigerant systems must be trained and certified. Fines are in place for violations and compliance is now being monitored by the U.S. EPA.

OPERATING INSTRUCTIONS

1. Connect can tap fitting to hose and coupler assembly (not included).
2. Connect refrigerant can to the bottom of can tap, turn counterclockwise.
3. Turn handle clockwise to depress the valve in can to flow refrigerant.
4. First time use, purge air in hose.
5. Connect coupler (not included) to low side of system, refrigerant will flow into the system.
6. Properly discard can when empty.

For parts or service contact the service department: 1-888-825-6989