



ATD-5125 Brake Bleeder Tank



Features:

- 4 qt. capacity
- 3/8" I.D. x 10-1/2 ft. hose
- Quick disconnect coupler
- Shut-off valve and pressure gauge
- Portable tank fills and bleeds both standard and power brakes in a single operation
- Pressurized with built-in hand pump
- Shipping Weight: 5.0 lbs.



WARNING



WARNING: This product may contain chemicals, including lead, known to the State of California to cause cancer, birth defects or other reproductive harm. *Wash hands after handling.*

Made in the USA to ATD Tools, Inc. Specifications
Visit us at www.atdtools.com

ATD5125_rev_0617

SAFETY INSTRUCTIONS

- **NEVER** allow unauthorized personnel to operate this product.
- **NEVER** use this product for anything other than its intended use.
- **THOROUGHLY** train new employees in the proper use and care of this product.
- **PROHIBIT** unauthorized personnel from being in shop area while this product is in use.

CAUTION

- Before using this product, read and fully understand the operating instructions and all decals on the product. This is necessary to prevent injury to the operator and damage to the product.
- Do not attempt to use this product for anything other than the intended use.
- Refer to vehicle service manual for proper bleeding procedure.
- Do not use Aviation or Hydraulic Fluid with this product. Product damage may result.
- Avoid allowing Brake Fluid to contact vehicle finished surfaces. Damage to the surface finish may result.
- Always wear appropriate eye protection..

ASSEMBLY AND TESTING

BEFORE USING, YOU MUST TEST THE TANK

With tank empty, turn handle end cap clockwise to seal. Push down on handle and turn 1/4 turn counter-clockwise to release pump. Pump handle about 12 strokes with shut off valve closed. Check gauge to insure that the tank holds pressure.

CAUTION


- ONLY USE HAND PUMP TO PRESSURIZE TANK
- WEAR SAFETY GOGGLES FOR PROTECTION
- DO NOT STAND WITH FACE OR BODY OVER THE TANK WHEN LOOSENING OR REMOVING PUMP
- DO NOT LEAVE A PRESSURIZED TANK IN THE HOT SUN OR NEAR ANY SOURCE OF EXTREME HEAT
- USE AUTOMOTIVE BRAKE FLUID, DOT 3 OR DOT 4 ONLY, OR EXPLOSIVE FAILURE AND SEVERE INJURY CAN RESULT

OPERATION

- 1) Bleed off any air pressure in the tank by slowly turning the handle and cap until the air is released.
- 2) Remove the pump assembly and add brake fluid (approximately 1 gallon) to the tank.
DO NOT FILL ABOVE THE ONE GALLON LINE as some space is required to pressurize the tank.
- 3) Replace pump assembly and rotate clockwise to seal.
- 4) Close shut off valve on hose.
- 5) Pressurize tank with hand pump to approximately 10-15 PSI.
- 6) Assemble appropriate adapter (not included) on master cylinder.
- 7) Connect quick coupler to adapter.
- 8) Open shut off valve on hose. **CHECK FOR LEAKS - BRAKE FLUID WILL DAMAGE PAINT!**
- 9) Bleed brakes according to manufacturer's specifications. When completed, close shut off valve and remove hose quick coupler from adapter.
- 10) Remove adapter and check fluid level in the master cylinder.
- 11) Replace master cylinder cover.
- 12) To bleed pressure from tank when not in use to prevent accidental loss of fluid, pull up on pressure relief cap.



ATD-5125

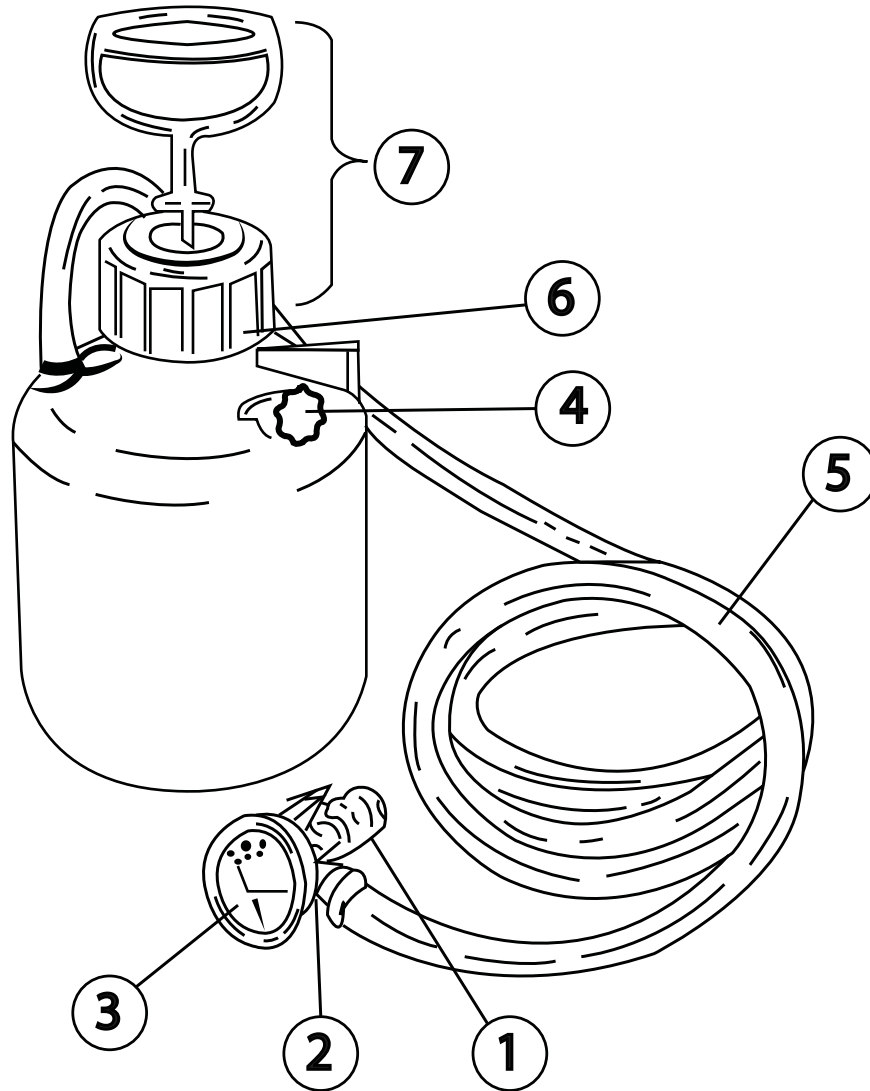

ITEM#	ORDERING PART#	PART DESCRIPTION
1	370-800	DISCONNECT
2	370-700	NEEDLE VALVE
3	370-500	GAUGE
4	370-950	RELIEF VALVE
5	370-200	HOSE/FITTING ASSEMBLY
6	370-250	O-RING (30000CNEW)
7	370-100	PUMP ONLY (30000)



WARRANTY

1 YEAR LIMITED WARRANTY

THIS WARRANTY AND CONFIRMED RECEIPT(S) SHOULD BE RETAINED BY THE CUSTOMER AT ALL TIMES

PURCHASED FROM: _____

DATE PURCHASED: _____

INVOICE/RECEIPT NUMBER: _____

Your ATD-5125 is warranted for a period of 12 months from the original purchase date.

For a period of one (1) year from your purchase date, ATD Tools Inc. will repair or replace (at its option) without charge, your ATD product if it was purchased new and the product has failed due to a defect in material or workmanship which you experienced during normal use of the product. This limited warranty is your exclusive remedy.

To access the benefits of this warranty, contact your supplier, or point of sale directly. You may be advised to return the product under warranty, freight prepaid, to your supplier for warranty determination.

If this ATD product is altered, abused, misused, modified, or undergoes service by an unauthorized technician, your warranty will be void. We are not responsible for damage to ornamental designs you place on this ATD product and such ornamentation should not cover any warnings or instructions or they may void the warranty. This warranty does not cover scratches, superficial dents, and other abrasions to the paint finish that occur under normal use. It also does not cover normal wear items such as but not limited to brushes, batteries, drill bits, drill chucks, pads or blades.

Subject to the law in your state:

- (1) Your sole and exclusive remedy is repair or replacement of the defective product as described above.
- (2) ATD is not liable for any incidental damages, including but not limited to, lost profits and unforeseeable consequences.
- (3) The repair and replacement of this product under the express limited warranty described above is your exclusive remedy and is provided in lieu of all other warranties, express or implied. All other warranties, including implied warranties and warranties of merchantability or fitness for a particular purpose are disclaimed and, if disclaimer is prohibited, these warranties are limited to one year from your date of purchase of this product.

Some states' laws do not allow limited durations on certain implied warranties and some states' laws do not allow limitations on incidental or consequential damages. You should consult the law in your state to determine how your rights may vary.

[Affix receipt or invoice here for safe keeping]