



SPARE PARTS LIST

Model # Atd-5810

ITEM	PARTCODE	DESCRIPTION	QTY	ITEM	PARTCODE	DESCRIPTION	QTY
1	430-6-4302-406	spring	1	47	426-6-1201-106	safety valve screw	1
2	430-6-2202-109	collor	1	48	324-4-1900-208	filler screw assy.	2
3	*	piston rod	1	50	532-8-0050-024	filter	1
4	*	snap ring	1	51	*	o-ring	2
5	*	ram bearing	2	54	430-6-4101-100	reservoir	1
6	*	backup ring	1	55	430-6-1106-108	bolt rod	1
7	*	u-cup	1	56	430-6-1501-104	bracket	1
8	*	washer	1	57	511-7-0180-303	o-ring	1
9	*	internal snap ring	2	58	426-6-1502-100	nut	1
10	522-2-0130-000	return spring	1	59	506-9-0124-028	handle grip	1
11	610-1-0063-020	cross head screw	1	60	430-6-1702-407	handle	1
13	*	cylinder base	1	61	434-6-1701-302	handle sleeve	2
14	*	backup ring	1	62	*	retaining pin	1
15	*	o-ring	1				
16	*	cylinder	1	501	435-3-4615-101	extension tube (4)	1
				502	435-3-4614-109	extension tube (3)	1
17	430-6-2308-206	retaining ring	2	503	435-3-4613-107	extension tube (2)	1
18	*	cylinder collar	1	504	435-3-4611-103	extension tube (1)	1
19	430-6-2305-200	cover	1	506	435-4-4400-106	connector	1
20	434-6-3204-207	coupler nut	1				
21	434-3-3201-102	female coupler	1	507	430-6-4640-406	wedge head	1
				509	430-6-4801-202	flat base	1
22	434-6-3312-109	dust cover-female	1	510	430-6-4360-504	ram toe	1
23	434-4-3201-108	quick coupler-female	1	511	430-6-4620-107	plunger toe	1
24	431-6-4660-409	serrated saddle	1	512	430-4-4700-204	2 3/4" rubber head	1
25	434-6-3313-101	dust cover-male	1				
26	434-3-3301-106	quick coupler-male	1	513	430-6-4650-500	90° combination head	1
				514	434-2-4100-105	hydraulic spreader	1
27	426-3-1301-203	release valve	1	515	435-1-2000-102	ram assy.	1
28	*	oil seal	1	516	435-6-7102-105	blow case	1
29	601-7-0006-005	steel ball	2				
30	434-4-3000-108	hose	1	514-1	428-6-4102-507	upper jaw	1
31	426-6-1105-201	bolt plug	1	514-2	428-6-4101-202	lower jaw	1
				514-3	428-6-4104-309	top nut	1
32	601-7-0008-009	steel ball	2	514-4	512-3-0216-017	washer	1
33	*	base	1	514-5	428-6-4103-509	piston	1
34	*	pin	1				
35	*	pin piston	1	514-6	*	backup ring	1
36	430-6-1601-209	pump piston	1	514-7	*	u-cup	1
				514-8	534-2-0190-028	return spring	1
37	428-6-1104-203	screw adjustment	1	514-9	428-6-4105-109	pin	1
38	513-3-0270-010	washer	1	514-10	667-5-0120-00	rataining ring "C"	1
39	428-6-1103-100	upper seal base	1				
40	*	V-oil seal	1	514-11	434-3-3201-102	quick coupler-female	1
41	*	V-oil seal	2	514-12	434-6-3204-207	coupler nut	1
				514-13	434-6-3312-109	dust cover	1
42	*	V-oil seal	1				
43	428-6-1102-209	lower seal base	1				
44	522-8-0127-016	cup filter	1				
45	501-9-0085-202	spring cap	1				
46	516-2-0080-010	safety spring	1				

* part is not available

