



ATD-6572 Adjustable Bumper Stand Owner's Manual



FEATURES:

- Holds any plastic bumper cover without touching the painted surface
- Cover can be rotated 90° to ensure proper paint coverage
- (5) Locking positions
- Protective rubber boots keep critical areas free of overspray
- (4) Industrial grade locking casters for zero movement when locked

General Safety Information:

1. This bumper stand is not to be used for any other purpose than intended. It is intended for storage of bumpers prior to preparation and spraying.
2. This bumper stand is not to be used by unqualified persons or minors.
3. This bumper stand is not to be used as a climbing frame or an anchor point.
4. Tie back long hair and do not wear loose clothing when using this bumper stand.
5. Wear appropriate PPE (personal protective equipment) at all times when using the bumper stand.
6. Use on a stable, level and dry surface only.
7. Keep your work area clean and tidy at all times.
8. Do not put more than one bumper on this bumper stand at any time.
9. Do not carry out any work in such a way that you will compromise the integrity of the stand or the safety of yourself, colleagues, visitors, or in any manner that will cause damage to property.

Assembly Instructions:

Please refer to the diagram on the following page for these steps:


1. Check to be sure all of the parts and hardware are present.
2. If you are missing parts or hardware, please contact your point of sale immediately.
3. Bolt Base Stand Tubes (#12) to the Frame Stand (#10), securing with Bolt (#20), Washer (#21) and Lock Nut (#22).
4. Bolt Left and Right Adjustable Plates (#8 and #9) to the Frame Stand (#10).
5. Slide Back Cradle Tube (#3) through the eyelets of the Cross Tube (#4) and then into ends of Front Cradle Tube (#1) and bolt to corresponding holes in Left and Right Adjustable Plates with Bolt (#17), Washer (#18) and Lock Nut (#19).
6. Slide Ball Socket Boots (#11) and Rubber Boots (#5) over Slide Support Arms (#6 and #7) and then slide the Support Arms (#6 and #7) into ends of Cross Tube (#4)
7. Slide all Plastic Knobs (#14) into the Rubber Sleeves (#13) and screw Plastic Knobs into assembled Cross Tube
8. Put Casters (#23) through the assembled unit in the ends of each Base Stand Tube (#12) and secure with Bolt (#20), Washer (#21) and Lock Nut (#22).

Operation:

1. The tilt of the Cradle is adjusted by pulling the two Spring Loaded Locking Pins (A) on the top of the Frame Stand inward while tilting the Cradle into the desired position and releasing the Locking Pins into the holes in the Left and Right Adjustable Plates to lock the Cradle.
2. The position of the Cross Tube (#4) and the Support Arms (#6 and #7) is adjusted by loosening the Plastic Knobs (#14) and sliding the Cross Tube or Support Arms to the desired position and tightening the Plastic Knobs again.

ATD®

ATD-6572

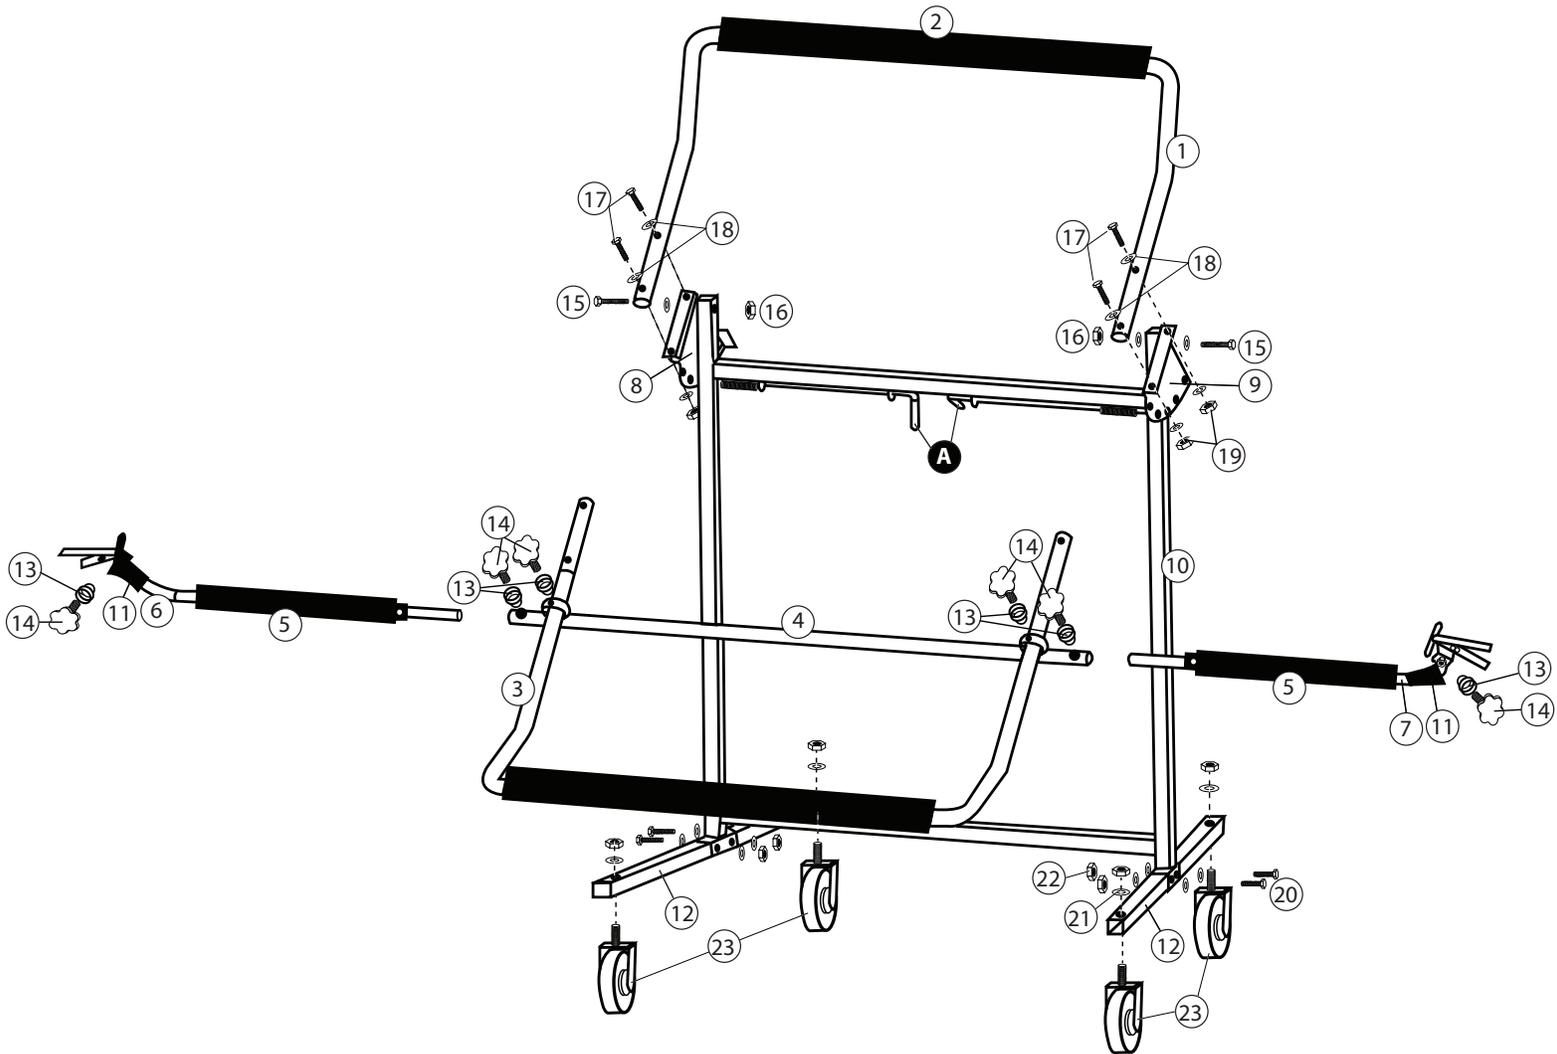

ITEM#	ORDERING PART#	PART DESCRIPTION	QTY
1	PRT6572-01	FRONT CRADLE TUBE	1
2	PRT6572-02	FOAM COVER	2
3	PRT6572-03	BACK CRADLE TUBE	1
4	PRT6572-04	CROSS TUBE	1
5	PRT6572-05	RUBBER BOOT	2
6	PRT6572-06	SUPPORT ARM (L)	1
7	PRT6572-07	SUPPORT ARM (R)	1
8	PRT6572-08	ADJUSTABLE PLATE (L)	1
9	PRT6572-09	ADJUSTABLE PLATE (R)	1
10	PRT6572-10	FRAME STAND	1
11	PRT6572-11	BALL SOCKET BOOT	2
12	PRT6572-12	BASE STAND TUBE	2

ITEM#	ORDERING PART#	PART DESCRIPTION	QTY
13	PRT6572-13	RUBBER SLEEVE	6
14	PRT6572-HK	PLASTIC KNOB	6
15	PRT6572-HK	PIN	2
16	PRT6572-HK	PIN CLIP	2
17	PRT6572-HK	BOLT (M6 x 40)	4
18	PRT6572-HK	WASHER (M6)	8
19	PRT6572-HK	LOCK NUT (M6)	4
20	PRT6572-HK	BOLT (M8 x 45)	4
21	PRT6572-HK	WASHER (M8)	8
22	PRT6572-HK	LOCK NUT (M8)	4
23	PRT6572-23	CASTER (SET)	4



WARRANTY

1 YEAR LIMITED WARRANTY

THIS WARRANTY AND CONFIRMED RECEIPT(S) SHOULD BE RETAINED BY THE CUSTOMER AT ALL TIMES

PURCHASED FROM: _____

DATE PURCHASED: _____

INVOICE/RECEIPT NUMBER: _____

Your ATD-6572 is warranted for a period of 12 months from the original purchase date.

For a period of one (1) year from your purchase date, ATD Tools Inc. will repair or replace (at its option) without charge, your ATD product if it was purchased new and the product has failed due to a defect in material or workmanship which you experienced during normal use of the product. This limited warranty is your exclusive remedy.

To access the benefits of this warranty, contact your supplier, or point of sale directly. You may be advised to return the product under warranty, freight prepaid, to your supplier for warranty determination.

If this ATD product is altered, abused, misused, modified, or undergoes service by an unauthorized technician, your warranty will be void. We are not responsible for damage to ornamental designs you place on this ATD product and such ornamentation should not cover any warnings or instructions or they may void the warranty. This warranty does not cover scratches, superficial dents, and other abrasions to the paint finish that occur under normal use. It also does not cover normal wear items such as but not limited to brushes, batteries, drill bits, drill chucks, pads or blades.

Subject to the law in your state:

- (1) Your sole and exclusive remedy is repair or replacement of the defective product as described above.
- (2) ATD is not liable for any incidental damages, including but not limited to, lost profits and unforeseeable consequences.
- (3) The repair and replacement of this product under the express limited warranty described above is your exclusive remedy and is provided in lieu of all other warranties, express or implied. All other warranties, including implied warranties and warranties of merchantability or fitness for a particular purpose are disclaimed and, if disclaimer is prohibited, these warranties are limited to one year from your date of purchase of this product.

Some states' laws do not allow limited durations on certain implied warranties and some states' laws do not allow limitations on incidental or consequential damages. You should consult the law in your state to determine how your rights may vary.

[Affix receipt or invoice here for safe keeping]