


ATD-5163 S-Cam Brake Tool Instructions

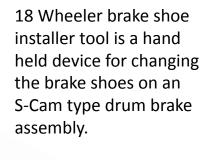



U-shaped fork on one end to stretch the retaining spring so that both halves of the brake shoes are held together. This allows the individual to hook up the pin.







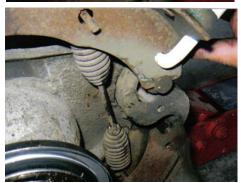

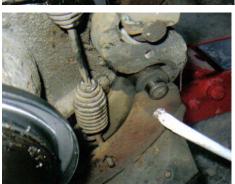



An S-shaped device on the opposite end enables the user to position the brake shoes in a way that allows for leverage for installation of the rollers. The hooked end pulls the brake shoes apart so that the rollers can be installed faster and safely.