




ATD-81051

**Blow Molded Heavy-Duty Creeper
INSTRUCTION MANUAL**



**Dimensions: 39-3/4" L x 4-1/4" H x 19" W
Weight Capacity: 250 lbs.**

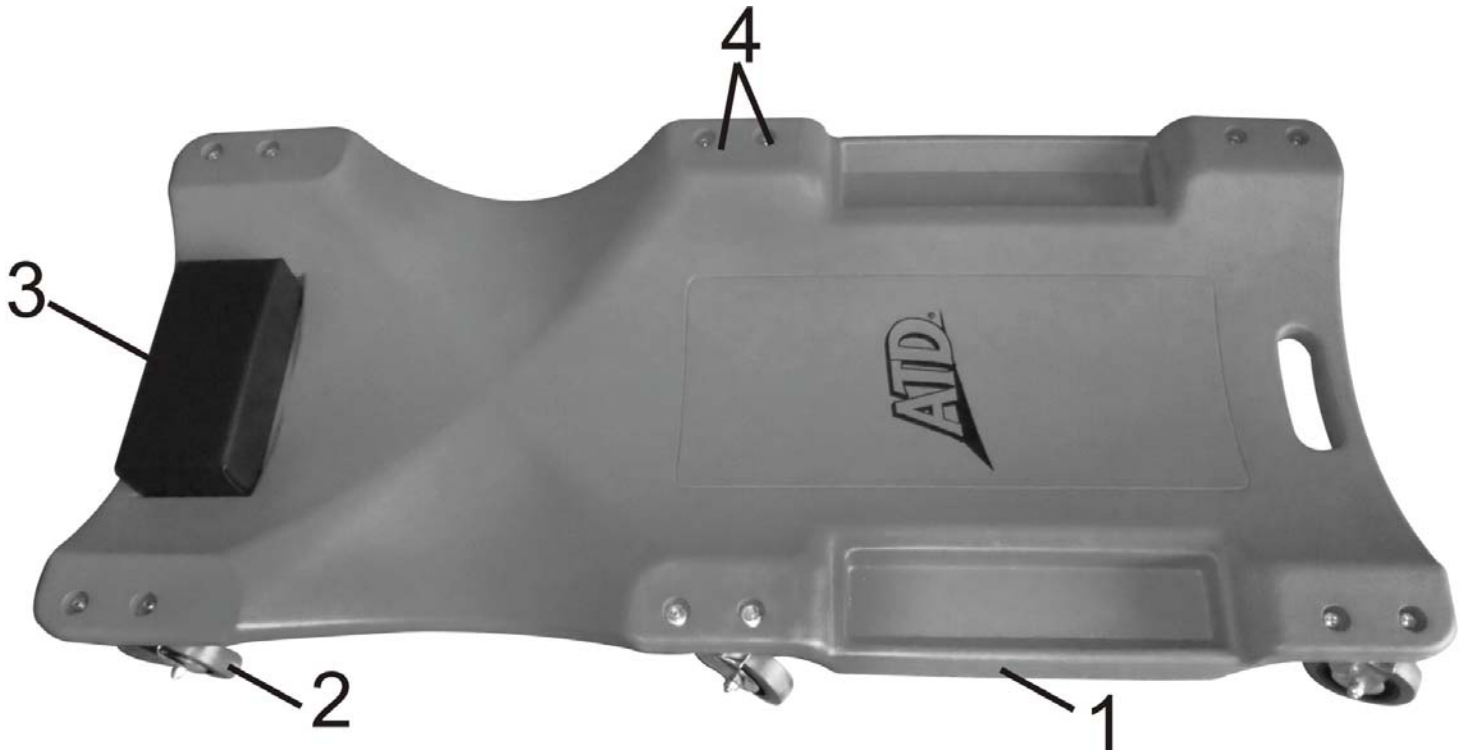

Assembly Instructions:

- 1) Place bolts through square holes in caster base. Make sure the square shoulder on bolt stays fit in square hole on caster.
- 2) Place caster onto plastic body of creeper (#1) Make sure the bolts go through both holes provided in creeper body.
- 3) Slide sleeve onto male portion of bolt that is sticking up through the body of the creeper. Sleeve should recess into the creeper body.
- 4) Secure with nut.
- 5) Repeat procedure for each caster.

ITEM#	ORDERING PART#	PART DESCRIPTION
1	PRT81051-01	MAIN CREEPER BODY
2	ATD-81036	CASTER
3	PRT81050-03	HEADREST
4	PRT81051-H	HARDWARE PACKAGE (includes 12 bolts, 12 sleeves and 12 nuts)