



ATD-81010 Hydraulic Creeper Seat Owner's Manual



Features:

- Convenient lever for easy height adjustment from 16" to 21"
- Handy tray for tool & parts storage
- (5) Industrial strength casters with 2-1/2" oil, chemical and grease resistant wheels
- Solid wheel design for added strength with rounded sides for easy movement
- Heavy-vinyl padded seat
- 300 lbs. weight capacity
- 2-Year Limited Warranty

WARNING

WARNING: This product contains chemicals, including lead, known to the State of California to cause cancer, birth defects or other reproductive harm. *Wash hands after handling.*

Assembly Instructions

1. Attach all five (5) casters through the bottom of the steel base (#9) and the tool tray (#8). Insert the threaded stem of each caster through each of the holes, add washers (#7) and tighten nuts (#6) onto stems with a wrench.
2. Attach the up/down control board (#2) to the underside of the seat cushion with the washers (#3) and screws (#4). Tighten securely.
3. Insert the painted, larger end of the hydraulic shaft (#5) into center hole on top of round metal base. To avoid damaging the shaft, do not force or hammer cylinder into the hole.
4. Place seat on top of the unpainted, smaller end of the hydraulic shaft. As in step #3, do not force or hammer the seat onto the hydraulic shaft.
5. To lock seat and hydraulic shaft into place, slowly add your weight to the seat by sitting on the seat for approximately 10 seconds. The hydraulic shaft and the seat will lock into place automatically.




Care Instructions

Your ATD Hydraulic Creeper Seat is designed to give you worry-free service with little to no maintenance. There should be no need for periodic oiling or maintenance of the seat or cylinder. Simply clean with a damp cloth. Avoid contact with harsh chemicals.



ATD-81010

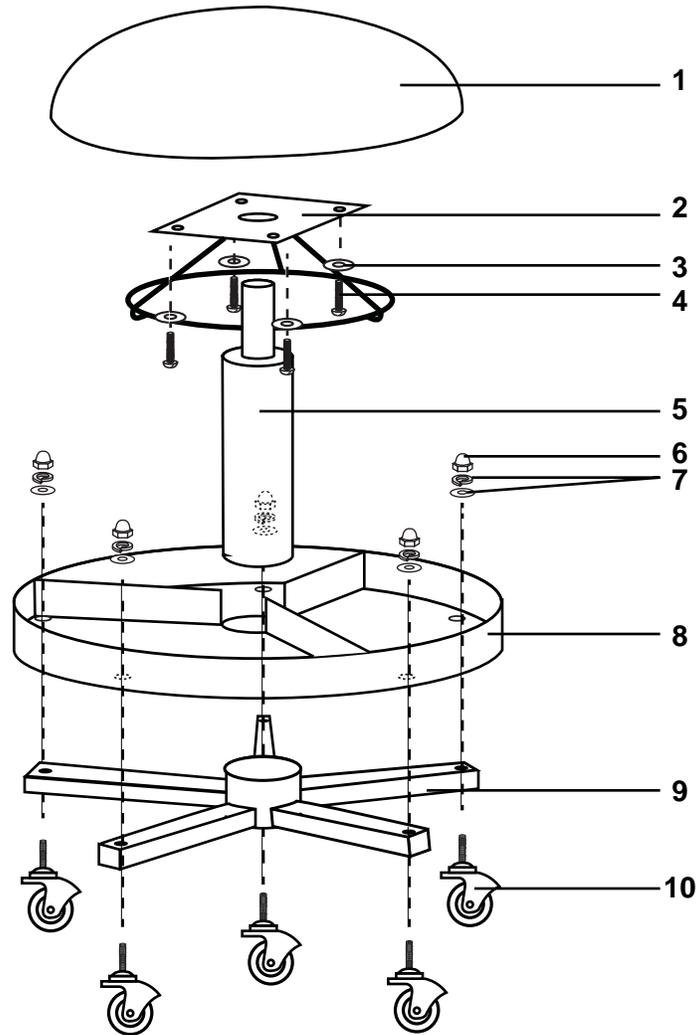

ITEM#	ORDERING PART#	PART DESCRIPTION
1	PRT81010-01	SEAT
2	PRT81010-02	UP & DOWN CONTROL BOARD
3	PRT81010-H	WASHER, 6mm
4	PRT81010-H	SCREW, 6 x16mm
5	PRT81010-05	PNEUMATIC SHAFT
6	PRT81010-H	NUT, 8mm
7	PRT81010-H	WASHERS, 8mm
8	PRT81010-08	TOOL TRAY
9	PRT81010-09	STEEL BASE
10	ATD-81001	2.5" REPLACEMENT CASTER (LONG STEM)



WARRANTY

2 YEAR LIMITED WARRANTY

THIS WARRANTY AND CONFIRMED RECEIPT(S) SHOULD BE RETAINED BY THE CUSTOMER AT ALL TIMES

PURCHASED FROM: _____

DATE PURCHASED: _____

INVOICE/RECIEPT NUMBER: _____

Your ATD-81010 is warranted for a period of 12 months from the original purchase date.

For a period of one (1) year from your purchase date, ATD Tools Inc. will repair or replace (at its option) without charge, your ATD product if it was purchased new and the product has failed due to a defect in material or workmanship which you experienced during normal use of the product. This limited warranty is your exclusive remedy.


To access the benefits of this warranty, contact your supplier, or point of sale directly. You may be advised to return the product under warranty, freight prepaid, to your supplier for warranty determination.

If this ATD product is altered, abused, misused, modified, or undergoes service by an unauthorized technician, your warranty will be void. We are not responsible for damage to ornamental designs you place on this ATD product and such ornamentation should not cover any warnings or instructions or they may void the warranty. This warranty does not cover scratches, superficial dents, and other abrasions to the paint finish that occur under normal use. It also does not cover normal wear items such as but not limited to brushes, batteries, drill bits, drill chucks, pads or blades.

Subject to the law in your state:

- (1) Your sole and exclusive remedy is repair or replacement of the defective product as described above.
- (2) ATD is not liable for any incidental damages, including but not limited to, lost profits and unforeseeable consequences.
- (3) The repair and replacement of this product under the express limited warranty described above is your exclusive remedy and is provided in lieu of all other warranties, express or implied. All other warranties, including implied warranties and warranties of merchantability or fitness for a particular purpose are disclaimed and, if disclaimer is prohibited, these warranties are limited to one year from your date of purchase of this product.

Some states' laws do not allow limited durations on certain implied warranties and some states' laws do not allow limitations on incidental or consequential damages. You should consult the law in your state to determine how your rights may vary.

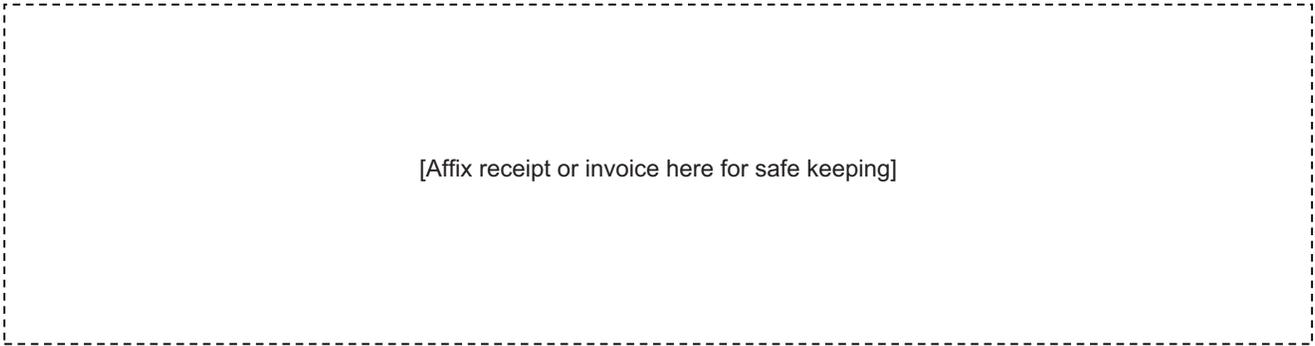

[Affix receipt or invoice here for safe keeping]