



ATD-81055 & ATD-81056 Shop Stool with Checkerboard or Flame Design Owner's Manual



Features:

- Great for the shop, garage, basement, bar, etc.
- Padded 14-1/4" diameter seat swivels 360°
- Chrome plated 1" OD steel legs

Specifications:

- Height: 28-3/8" tall
- Weight capacity: 330 lbs.

Assembly Instructions

Step 1:


- Put the Rubber Cap (9) to the Leg A (1) and Leg B (2)
- Separate stool Leg A (1) and Leg B (2) as shown on diagram (in a cross shape "+").
- Put the O-ring Tube (3) from the top to position as shown in diagram 1.
- Secure the Screw (6) x4 pcs and Nylon Locking Nut (7) x4 pcs but do not tighten at this point.
- Place the Swivel Mount Plate (4) to the position as shown in diagram 1.
- Position the hole on the Swivel Mount Plate (4) and Leg A (1) and Leg B (2).
- Secure the Screw (8) x 4 pcs to the Leg A (1) and Leg B (2) tightly.

Step 2:

- Lay the Seat Pad (5) face down on a clean and hard surface.
- Put the stool upside down on the Seat Pad (5) as shown on diagram 2.
- Position the hole on the Swivel Mount Plate (4) and Seat Pad (5).
- Secure the Screw (8) x 4 pcs to Seat Pad (5) tightly.

Step 3:

- Put the stool upside down as shown on diagram 3.
- Secure the Screw (6) x 4 pcs and Nylon Locking Nut (7) x 4 pcs tightly.

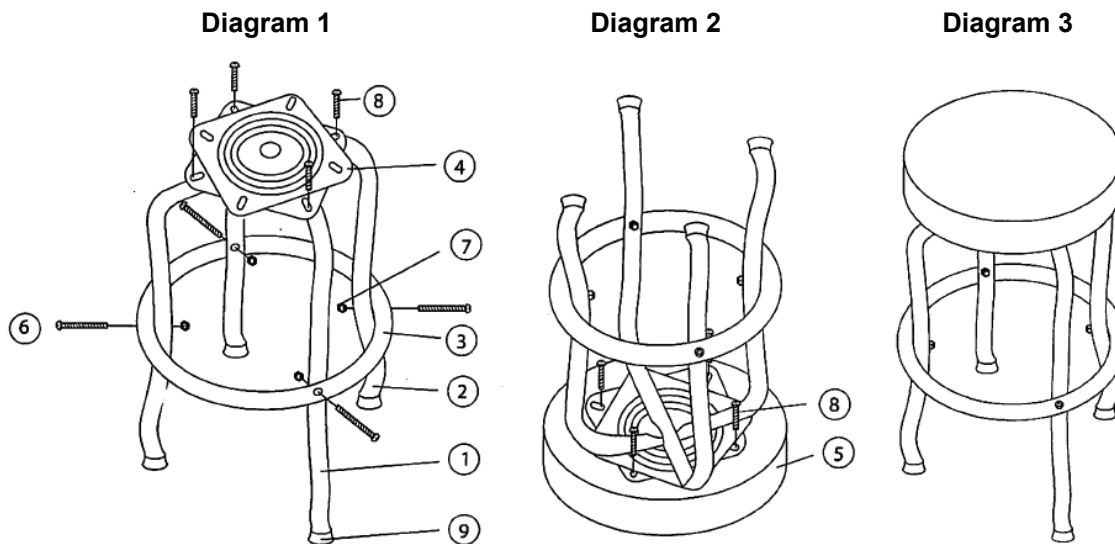

ITEM#	ORDERING PART#	PART DESCRIPTION	QTY
1	PRT81055-02	Leg A	1
2	PRT81055-02	Leg B	1
3	PRT81055-01	O-Ring Tube	1
4	PRT81055-04	Swivel Mount Plate	1
5	PRT81055-05	Seat Pad Checker - AG05964G	1
	PRT81056-05	Seat Pad Flame - AG05962G	
6	PRT81055-H	Screw, M6 x 45	4
7	PRT81055-H	Nylon Locking Nut	4
8	PRT81055-H	Screw, M6 x 20	8
9	PRT81055-03	Rubber Cap	4

One-Year Warranty:

Every product is inspected before leaving the factory. For a period of one (1) year from your purchase date, ATD Tools Inc. will repair or replace (at its option) without charge, your ATD product if it was purchased new and the product has failed due to a defect in material or workmanship which you experienced during normal use of the product. This limited warranty is your exclusive remedy. Simply return the product to the point of purchase with a copy of your proof of purchase for warranty consideration.