



## Desiccant Dryer Instruction Sheet

### P/N ATD-7761, ATD-7762, ATD-7763, ATD-7888, & ATD-7889

<b>Bowl</b>	<b>Max. Pressure</b>	<b>Temperature Range</b>
Metal w/Sight	250 psi	40°F to 160°F

**WARNING!** For compressed air service only. Do not use on life support systems or breathing air systems. Metal bowl sight is made of polycarbonate resin that will crack if exposed to solvents or oils containing ethyl acetate, methylenedichlorobenzene or any partially halogenated or aromatic hydrocarbons. For any additional information regarding chemical compatibility please contact: General Electric Plastics, One Plastic Avenue, Pittsfield, MA..


**INSTALLATION:** Install dryer so that air flow is in the direction indicated by the arrow on the head of the unit. A prefilter combination is always required upstream of the dryer. First stage filtration with a particulate filter will remove water and solid particles down to 40 microns in size. Second stage filtrations with an coalescing filter will remove oil and water particles down to 0.03 microns.

**NOTE:** Used desiccant material be regenerated by spreading the desiccant in a thin layer in a shallow pan and then heating it in a convection oven at 275°F until a complete color change occurs, usually within about 3 hours. Caution - avoid excessive temperatures.

**MAINTENANCE AND OPERATION:** Care must be taken to change or regenerate the dryer desiccant material once it appears pink in color. The following steps are to be taken when recharging the dryer: 1) Shut off air supply and bleed system. 2) Unscrew bowl ring and remove bowl assembly. 3) Remove used desiccant. 4) Unscrew lead-in bullet from threaded rod. 5) Remove exhaust tube, exhaust element and gasket. 6) Inspect and clean inside of exhaust tube if necessary and then reassemble the main assembly. 7) Remove sight retainer and sight o-ring. 8) Discard used desiccant within the sight body. 9) Fill sight body with new or regenerated desiccant. 10) Secure sight and o-ring by hand-tightening sight dome retainer. 11) Fill bowl with new or regenerated desiccant to 1/2" from top bowl flange. Replace bowl assembly and hand-tighten bowl ring. **CAUTION: Do not remove sight retainer while bowl is under pressure.**

**STORAGE:** Store replacement desiccant in a dry area making certain that the jar is tightly sealed with a shelf life noted.

Item	Description	Kit Number			Contents
		ATD-7761	ATD-7762	ATD-7888	
1, 2	Bowl Kit	BKD1204	BDK1204XL	BKD1206	Bowl O-Ring, Bowl Assembly w/Sight
3, 4					Bowl Adapter, Bowl Ring
5, 6, 7, 8, 9, 13, 14	Repair Kit	RKD1204	RKD1204XL	RKD1206	Ext. Retaining E-Ring, Lead-In O-Ring, Lead-In Bullet, Exhaust Tube, Threaded Rod, Drain Plug Adapter O-Ring
10, 11, 12	Element Kit	EKD1204	EKD1204XL	EKD1206	Dispersion Filter, Exhaust Element Gasket
Not Shown	Sight Kit	SKD10	SKD10	SKD10	Sight Body, O-Rings, Retaining Nut, Sight Dome, Dome Retainer

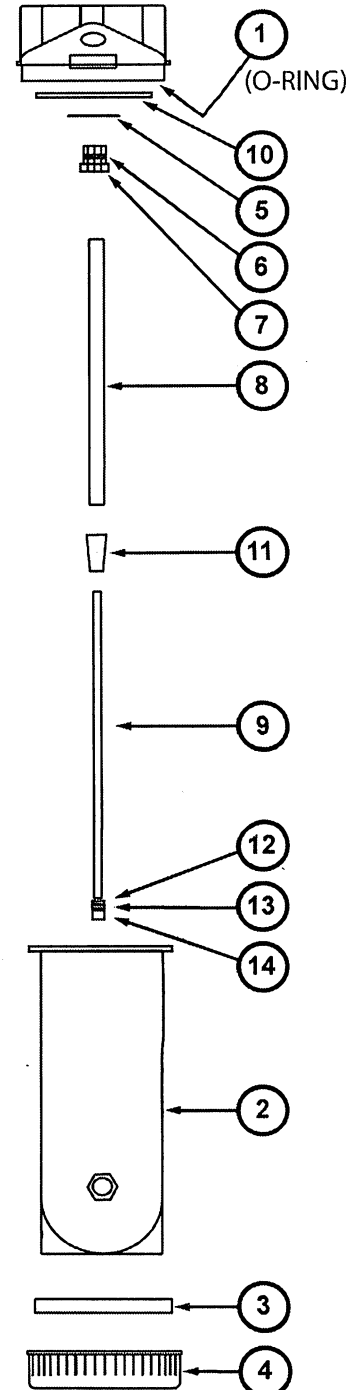

**NOTE:** To prevent excessive pressure drop, it is recommended that the exhaust element be replaced whenever the desiccant is replaced or recharged.